

PARTS LIST

for—

PRICE 3/6
post free

THE
ROTO-MILLER
156

GEO. MONRO LTD. Machinery Section
STATION APPROACH, WALTHAM CROSS, HERTS.

Telephone—Waltham Cross 2984 & 3663

Telegrams—Monro Waltham Cross

How to use the Spare Parts List and how to order Spare Parts

The Plates illustrate the Parts in the order and respective position in which they fit together.

When ordering always quote: Type and Serial Number of the machine as appearing on the Name Plate, Reference Number and Description of the Part as appearing on the present List, Address to which despatch is to be effected.

Certain Groups of Parts which are frequently required to be supplied already assembled at the Works are listed with the prefix "Ass." and Numbers 9..... Other groups of parts not listed in the order of each Component Part required followed by the word "Assembled".

Index to Machine Elements 56 A

	<i>Plate</i>		<i>Plate</i>
Air Filter	2	Magneto	3
Carburettor	1	Miller Gears	6
Controls	4	Miller Cover	5
Driving Wheels	5	Miller Springs and Tines	5 & 6
Engine Rotor	2	Rotary Miller	6
Engine Stator	1	Steering	4
Exhaust	1	Tank.	2
Fan	2	Tines	5 & 6
Gears	3	Wheels	5
Gearboxes	1	Tips	3
Guiding Arm	4		

Tips to Users

REMEMBER that only those brands of Lubricating Oil should be used which are specified in the Instruction Manual and that the proportion specified should be observed.

REMEMBER that the life of the engine depends on the correct upkeep of the Air Cleaner.

REMEMBER that the Oil Level in the Gearbox requires to be checked periodically.

REMEMBER that one each, Left and Right Miller Tine, is to be fitted next to the Miller Gearbox to obtain proper depth of cultivation and no centre ridge.

Plate No. 1

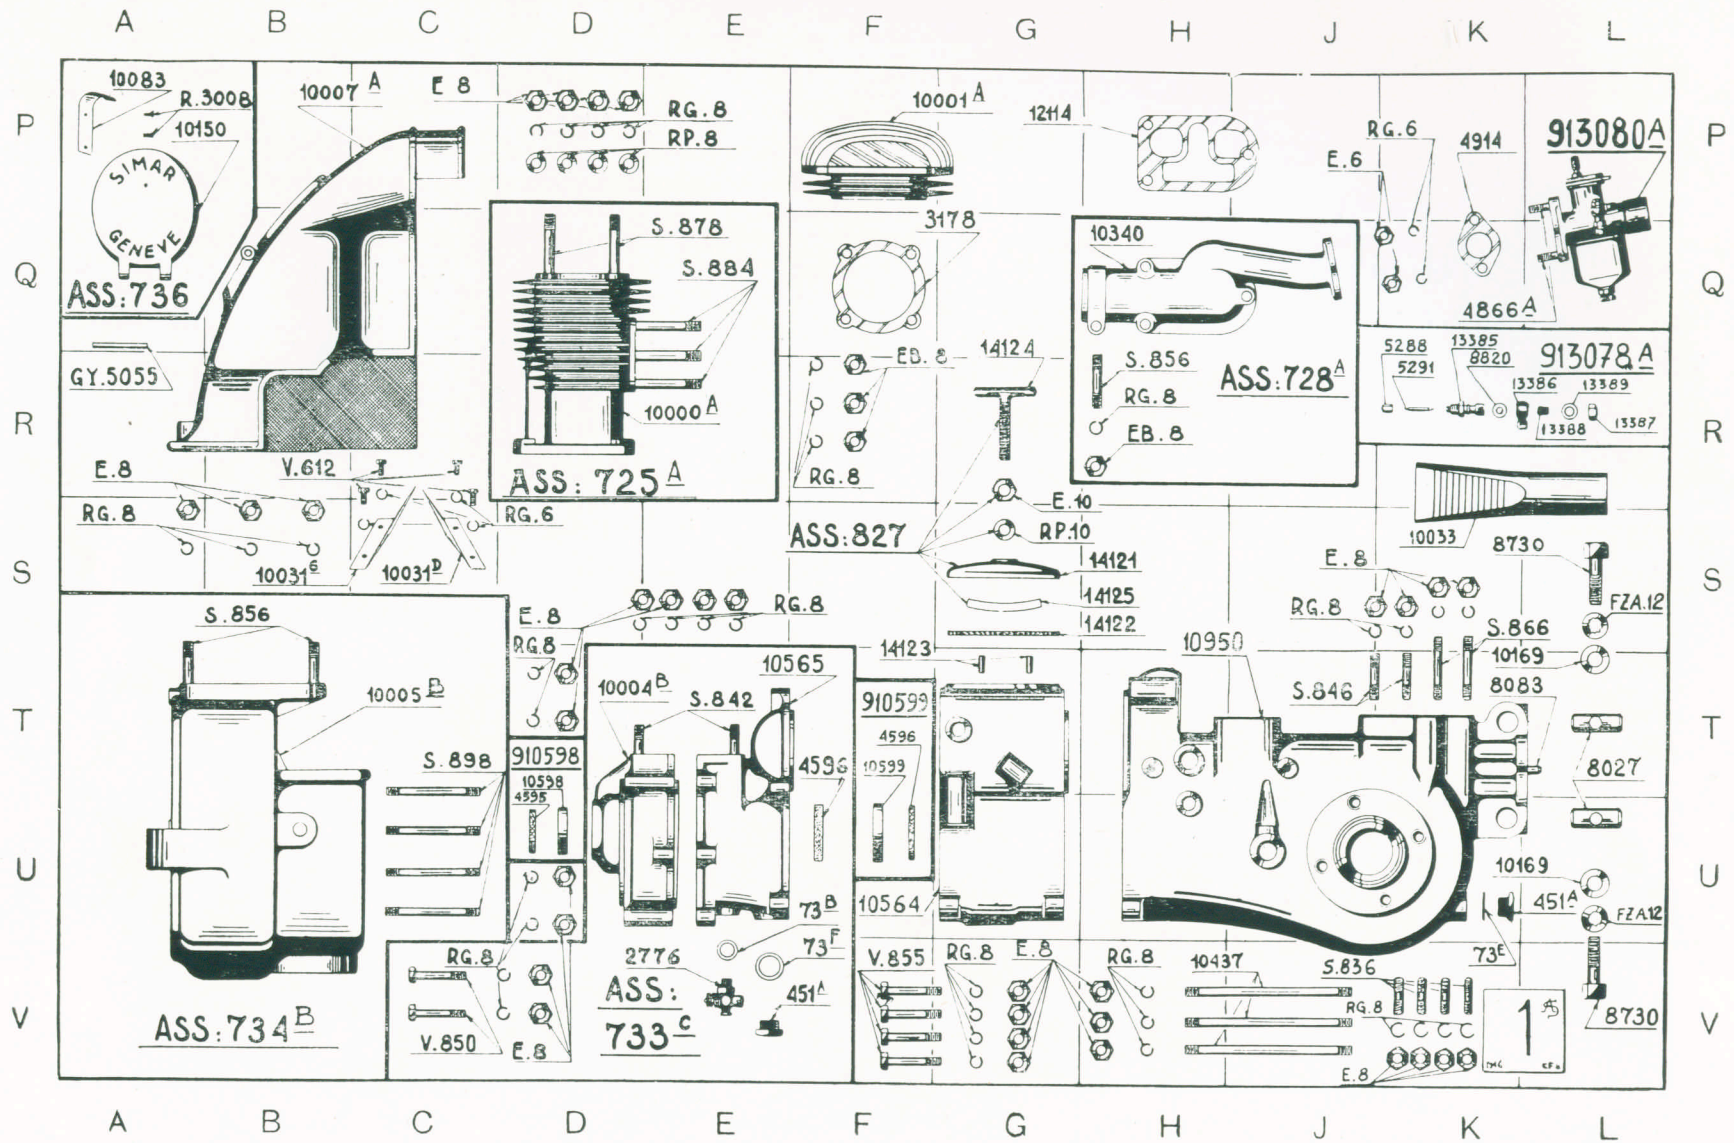


Plate No. 1

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
E.	6 Nut (JP)	2
RG.	6 Spring Washer (KP-DS)	6
E.	8 Nut (AR-CP-DS-DV-GV-JS-JV)	36
EB.	8 Bronze Nut for Manifold (FR-HR)	4
RG.	8 Spring Washer (AS-CV-DT-EP-ES-FR-GV-HR- HV-JS-JV)	40
RP.	8 Washer for Cylinder Head (EP)	4
E.	10 Nut to Oil Cover (GR)	1
RP.	10 Washer to Oil Cover (GS)	1
FZA.	12 Spring Washer fixing Miller (LS-LU)	2
	73 B Fibre Washer for Drain Cock (FU)	1
	73 F Fibre Washer for Drain Plug (FV-KV)	2
	451 A Drain Plug to Gearboxes (FV-LU)	2
V.	612 Screw for Plates inside Fan Casing (BR)	4
S.	836 Stud fixing (Protector) on Main Casing (JV)	8
S.	842 Stud for Cylinder Base (ET)	4
S.	846 Stud for Steering Base, short (JT)	2
V.	850 Bolt for Crankcase (CV)	2
V.	855 Bolt fixing Crankcase to Reverse Gearbox (FV)	4
S.	856 Stud for Fan Casing and Exhaust Pipe (BS-HR)	4
S.	866 Stud for Steering Base, Long (KLS)	2
S.	878 Stud for Cylinder Head (EQ)	4
S.	884 Stud for Manifold (EQ)	3
S.	898 Stud for Assembling Fan Casing to Crankcase (CT)	4
	2776 Drain Cock for Crankcase (DV)	1
R.	3008 Rivet for Spring on Inspection Lid (AP)	2
	3178 Gasket to Cylinder Head (FQ)	1
	4595 Felt Washer for Front Crankcase (DU)	1
	4596 Felt Washer for Rear Crankcase (FU)	2
	4866 A Stud for Carburettor (KQ)	2
	4914 Gasket between Carburettor and Manifold (KP)	1
GY.	5055 Hinge Pin of Inspection Lid (AR)	1
	5288 Seat for Carburettor float needle (KR)	1
	5291 Needle for Carburettor float (KR)	1
	8027 Hinge Pin for fixing Miller to Gearbox (LT)	2
	8083 Peg Locating Miller (LT)	2
	8730 Screw Fixing Miller to Gearbox (LV-KS)	2
	8820 Fibre Washer for fuel arrival Union (KR)	1

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
10000 A	Cylinder (ER)	1
10001 A	Cylinder Head (FP)	1
10004 B	Crankcase, Front (DT)	1
10005 B	Fan Casing (CT)	1
10007 A	Cowling (BP)	1
10031 G	Plate inside Fan Casing L.H.S. (BS)	1
10031 D	Plate inside Fan Casing R.H.S. (CS)	1
10033	Exhaust Pipe (KS)	1
10083	Spring for Inspection Lid (AP)	1
10150	Inspection Lid (AP)	1
10169	Washer for Screws fixing Miller (KT-KU)	2
10340	Manifold (HQ)	1
10437	Stud for fixing Engine to Gearboxes (HV)	3
10564	Reverse Gearbox Casing (FU)	1
10565	Crankcase, Rear (FT)	1
10598	Oil Seal for Front Crankcase (DU)	1
10599	Oil Seal for Rear Crankcase (FU)	1
10950	Main Gearbox Casing (HS)	1
12114	Gasket to Manifold (GP)	1
13385	Seat for float needle (KQ)	1
13386	Union on Fuel Pipe (KR)	1
13387	Cap (LR)	1
13388	Fuel Filter (LR)	1
13389	Joint in Cap (LR)	1
14121	Oil Cover (HS)	1
14122	Joint to Oil Cover (HS)	1
14123	Location Peg to Oil Cover (FT)	2
14124	Hand Screw to Oil Cover (GQ)	1
14125	Bracket to Oil Cover (HS)	1
Ass. 725 A	Cylinder with Studs (DR)	1
Ass. 728 A	Manifold with Stud, Nut and Spring Washer (JR)	1
Ass. 733 C	Crankcase complete with Felt, Studs, Drain Cock and Plug (DV)	1
Ass. 734 B	Fan Casing with Studs (AV)	1
Ass. 736	Inspection Lid Assembly (AQ)	1
Ass. 827	Oil Cover Assembly (FS)	1
910598	Seal for Front Crankcase complete (DT)	1
910599	Seal for Rear Crankcase complete (FT)	1
913078 A	Float Needle Assembly (LR)	1
913080 A	Carburettor complete (LP)	1

Plate No. 2

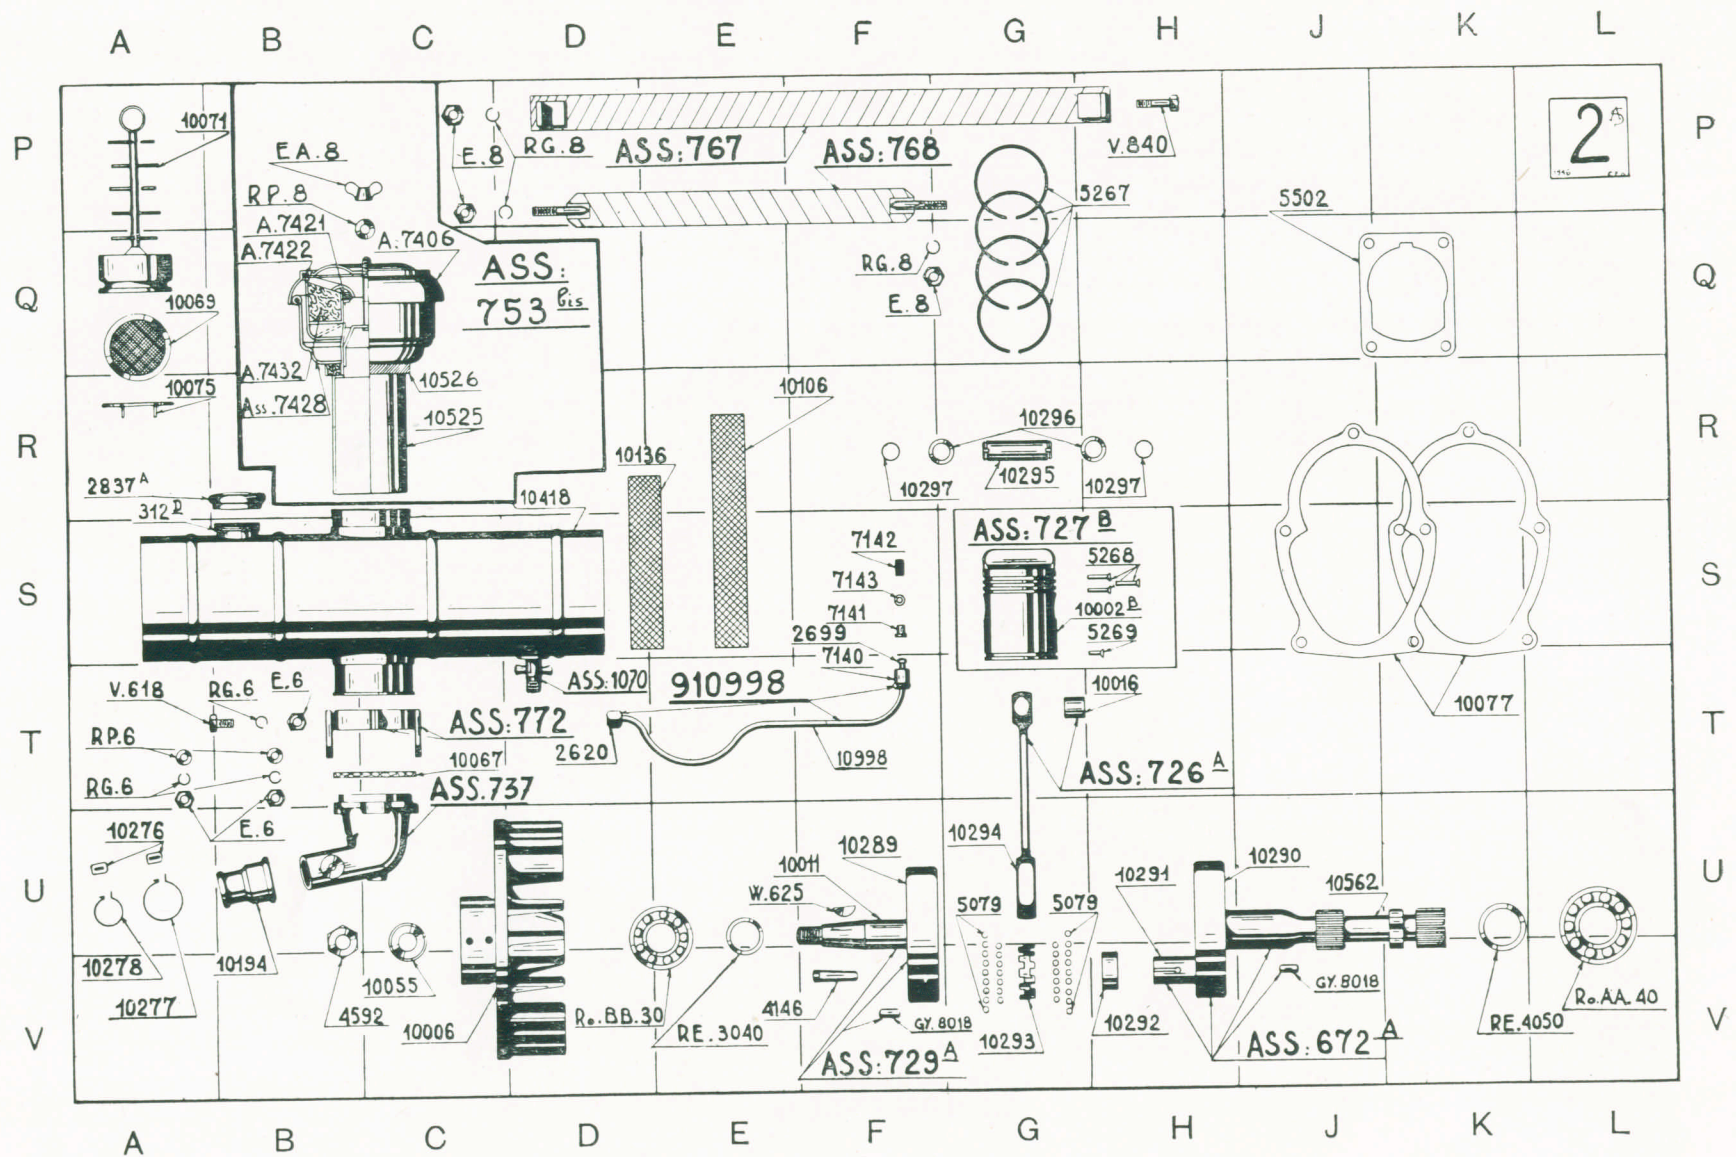


Plate No. 2

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
E.	6 Nut for Air Cleaner (BT-BU)	3
R.G.	6 Spring Washer for Air Cleaner (BT-AT)	3
RP.	6 Washer for Air Cleaner (AT)	2
E.	8 Nut for Air Cleaner and Tank Bands (CP-FQ)	3
EA.	8 Wing Nut for Oil Bath Air Filter (BP)	1
R.G.	8 Spring Washer for Air Cleaner and Tank Bands (FQ-DP)	3
RP.	8 Washer for Air Cleaner (BP)	1
Ro. BB.	30 Ballrace for Front Crankshaft (DV)	1
Ro. AA	40 Ballrace for Rear Crankshaft (LV)	1
	312 D Seating for Tank Cap (AR)	1
V.	618 Screw for Collar Support of Air Cleaner (AT)	1
W.	625 Woodruff Key for Front Crankshaft (EU)	1
V.	840 Bolt for front Tank Band (HP)	1
	2620 Union on Petrol Pipe, Carburettor End (DT)	1
	2699 Nipple on Fuel Pipe (FS)	2
	2837 A Cap to Fuel Tank (AR)	1
RE.	3040 Distance Washer for Front Crankshaft (EV)	1
RE.	4050 Distance Washer for Rear Crankshaft (KV)	1
	4146 Wedge Pin for Crankpin (EV)	1
	4592 Nut fixing Fan on Front Crankshaft (BV)	1
	5079 Roller (GU)	36
	5267 Piston Ring (HP)	4
	5268 Peg for Upper Piston Rings (HS)	3
	5269 Peg for Lower Piston Ring (HS)	1
	5502 Paper joint for Cylinder Base (JP)	1
	7140 Union on Fuel Pipe, Tank End (FT)	1
	7141 Body to Fuel Filter (FS)	1
	7142 Gauze to Fuel Filter (FS)	1
	7143 Copper Joint to Fuel Filter (FS)	1
A.	7406 Bell Cover to Oil Bath Air Filter (CQ)	1
A.	7421 Cork Joint to Oil Bath Air Filter, small (BP)	1
A.	7422 Cork Joint to Oil Bath Air Filter, large (BQ)	1
A.	7428 Body of Oil Bath Air Filter (BR)	1
A.	7432 Cartridge to Oil Bath Air Filter (BQ)	1
GY.	8018 Location Pin for Crankshaft (FV-JV)	2
	10002 B Piston (HS)	1
	10006 Fan (CV)	1

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
10011	Front Crankshaft (EU)	1
10016	Bush in Small End (HT)	1
10055	Washer to Fan (CV)	1
10067	Rubber Washer to Air Cleaner (CT)	1
10069	Sieve to Air Cleaner (AQ)	1
10071	Hook for Wood Shaving (AP)	1
10075	Spring fixing Sieve to Air Cleaner (AR)	1
10077	Paper joint for Crankcase to Gearbox (KT)	2
10106	Composition Lining for Tank Band, long (FR)	1
10136	Composition Lining for Tank Band, short (DR)	1
10194	Rubber Connector to Air Cleaner (BV)	1
10276	Plate for Clip to Rubber Connector (AU)	2
10277	Clip on larger diameter of Rubber Connect (AV)	1
10278	Clip on smaller diameter of Rubber Connect. (AV)	1
10289	Front Flywheel (FV)	1
10290	Rear Flywheel (JU)	1
10291	Crankpin (HU)	1
10292	Roller Race on Crankpin (HV)	1
10293	Cage for Big End Rollers (GV)	1
10294	Connecting Rod (GU)	1
10295	Gudgeon Pin (CR)	1
10296	Washer retaining Gudgeon Pin (CR)	2
10297	Spring Clip retaining Gudgeon Pin (FR-HR)	2
10418	Fuel Tank with Fuel Tap and Cap Seating (DR)	1
10525	Tube to Oil Bath Air Filter (CR)	1
10526	Felt Washer to Oil Bath Air Filter (CR)	1
10562	Rear Crankshaft (JU)	1
10998	Fuel Pipe, alone (FT)	1
Ass.	672 A Rear Crankshaft Assembly (JV)	1
Ass.	726 A Connecting Rod with Small End Bush (HT)	1
Ass.	727 B Piston with Pegs only (GS)	1
Ass.	729 A Front Crankshaft Assembly (FV)	1
Ass.	737 Air Pipe from Air Cleaner with Choke (CT)	1
Ass.	753bis Oil Bath Air Cleaner, complete (DQ)	1
Ass.	767 Band fixing Tank, front (EP)	1
Ass.	768 Band fixing Tank, rear (FP)	1
Ass.	772 Air Cleaner Collar Assembly (CT)	1
Ass.	1070 Fuel Tap (DT)	1
910998	Fuel Pipe Assembly (ET)	1

Plate No. 3

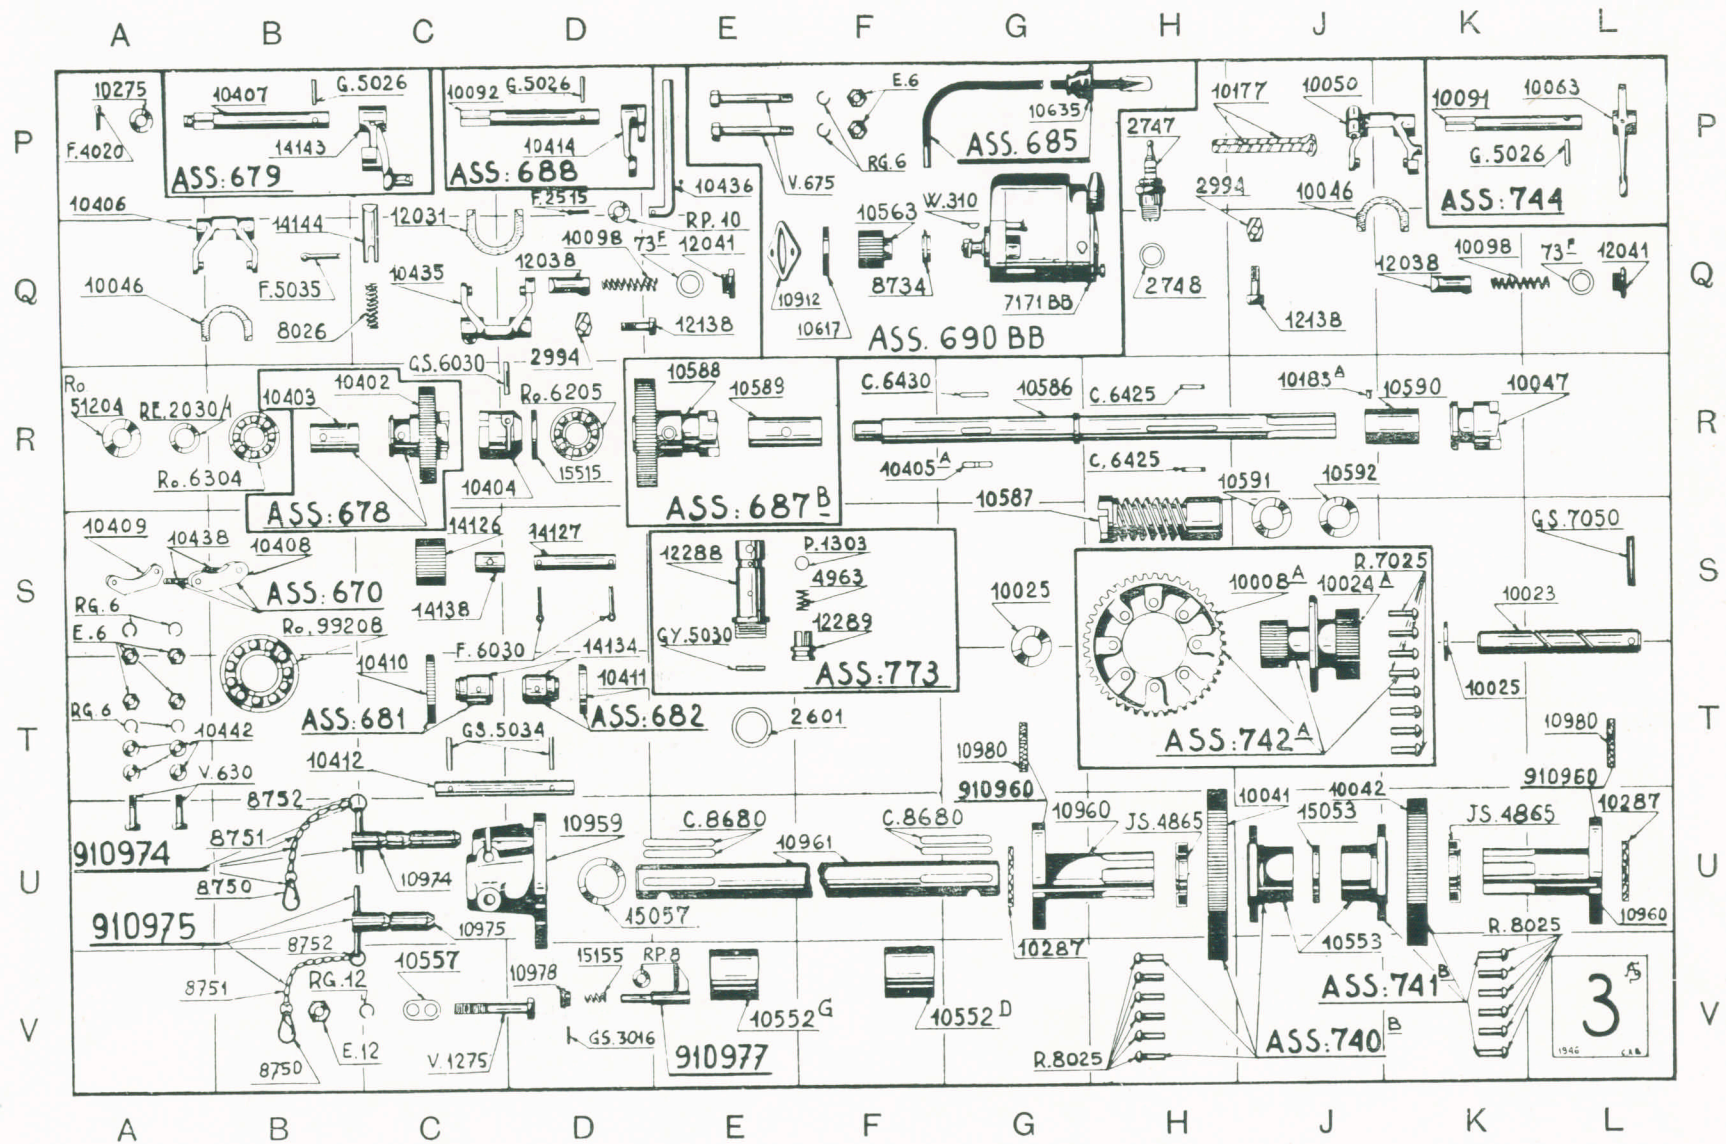


Plate No. 3

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
E. 6	Nut for fixing Magneto and Ballraces (AS-FP)	6
RG. 6	Spring Washer for fixing Magneto and Ballrace (AS-FP-AT)	6
RP. 8	Washer to Plug Lock (DV)	2
RP. 10	Washer to Motion Lock (EQ)	1
E. 12	Nut for Hubs (BV)	2
RG. 12	Spring Washer for Hubs (BV)	2
73 F	Fibre Washer for Plunger Plugs (EQ-LQ)	2
W. 310	Woodruff Key on Magneto (GP)	1
V. 630	Bolt fixing Ballrace No. 99208 (BT)	2
V. 675	Bolt fixing Magneto (FP)	2
V. 1275	Bolt for Hubs (CV)	2
P. 1303	Disc for Breather (FS)	1
RE. 2030/1	Distance Washer for Thrust Race 51204 (AR)	1
F. 2515	Split Pin to Motion Lock (DP)	1
2601	Fibre Washer for Breather (FT)	1
2747	Sparking Plug with Nipple (HP)	1
2748	Gasket to Sparking Plug (HQ)	1
2994	Locking Plate for Clutch Forks (DQ-HP)	2
GS. 3016	Straight Pin for Plug Lock (DV)	2
F. 4020	Split Pin to Reverse Motion Control (AP)	1
JS. 4865	Oil Seal for Main Axle (HU-KU)	2
4963	Spring for Breather (FS)	1
G. 5026	Taper Pin for Clutch Levers (BP-DP-KP)	3
GY. 5030	Split Taper Pin for Breather (ES)	1
GS. 5034	Pin to Oil Elevator and Reverse Motion Dog (CT)	2
F. 5035	Split Pin to Reverse Clutch Plunger (BQ)	1
F. 6030	Split Pin to Reversing Pinion (CS)	2
GS. 6030	Straight Pin for Reverse Motion Dog (CR)	1
RO. 6205	Ballrace on Front of Worm Shaft (DR)	1
RO. 6304	Ballrace on Front of Worm Shaft (AR)	1
C. 6425	Key on Worm Shaft, Rear (HR)	2
C. 6430	Key on Worm Shaft, Front (FR)	1
R. 7025	Rivet for Worm Wheel (JS)	8
GS. 7050	Pin for Worm Wheel Shaft 10023 (LS)	1
7171 BB	Magneto (GQ)	1
R. 8025	Rivet fixing Pinions and Hub Sleeves (GV-KU)	12
8026	Spring to Reverse Motion Plunger (BQ)	1
C. 8680	Key for Main Axle (EU-FU)	4
8734	Oil-Thrower on Magneto Spindle (FQ)	1
8750	Clamp for Chain (AU-BV)	2
8751	Welded Chain to Hub Plug (AU-AV)	2
8752	Welded Ring for Chain (BU)	2
10008 A	Worm Wheel (JS)	1
10023	Shaft for Worm Wheel and Driving Gear Set (KS)	1
10024 A	Driving Gear Set (JS)	1
10025	Distance Washer for Driving Gear Set (GS-KT)	2
10041	Driving Gear, low speed (JU)	1
10042	Driven Gear, top speed (JU)	1
10046	Collar for Reverse and Miller Clutch Forks (AQ-JP)	2
10047	Sliding Dog to Miller Drive (KR)	1
10050	Fork to Miller Clutch (JP)	1
10063	Lever for Miller Clutch (LP)	1
10091	Spindle for Miller Clutch (KP)	1
10092	Spindle for Forward Motion Clutch (CP)	1
10098	Spring for Forward and Miller Clutch Plungers (DQ-KQ)	2
10177	Collar for Bowden Wire and H.T. Lead (HP)	2
10183 A	Peg on Wormshaft Bush (JR)	1
10275	Washer for Reverse Gear (AP)	1
10287	Felt Washer on Main Axle (GV-LU)	2
10402	Reduction Gear of Reverse Motion (BR)	1
10403	Bush Inside Reduction Gear for Reverse Motion 10402 (BR)	1
10404	Dog for Reverse Motion (CR)	1
10405 A	Slotted Key on Worm Shaft, front 10413 (FR)	1
10406	Fork for Reverse Motion Clutch (AP)	1
10407	Spindle of Reverse Motion Clutch (BP)	1
10408	Welded Bracket holding Rear Crankshaft Ballrace (BS)	1
10409	Bracket holding Rear Crankshaft Ballrace (AS)	1

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
10410	Oil Elevator Gear (CT)	1
10411	Oil Elevator Disc (DT)	1
10412	Shaft to Oil Elevator (BT)	1
10414	Lever to Forward Motion Clutch (DP)	1
10435	Fork for Forward Motion Clutch (CQ)	1
10436	Finger for Motion Lock (EP)	1
10438	Welded Stud on Bracket holding Ballrace (AS)	2
10442	Washer for holding Ballrace (AT)	4
10552 D	Bush on Main Axle, right (GV)	1
10552 G	Bush on Main Axle, left (EV)	1
10553	Hub to Driven Gears (JV)	2
10557	Link for Plug Chain (CV)	2
10563	Pinion on Magneto Spindle (FQ)	1
10586	Worm Shaft (GR)	1
10587	Worm (GS)	1
10588	Reduction Gear of Forward Motion (ER)	1
10589	Bush Inside Reduction Gear of Forward Motion (ER)	1
10590	Bush on Worm Shaft (KR)	1
10591	Distance Washer for Worm (JR)	1
10592	Thrust Washer for Worm (JR)	1
10617	Ring on Magneto Flange (FQ)	1
10635	Rubber Cap to High Tension Wire (GP)	1
10912	Oil-retaining Washer for Magneto (EQ)	1
10959	Hubs to Driven Gears (DU)	1
10960	Sleeve for Driven Gears (GU-LU)	2
10961	Main Axle (FU)	1
10974	Plug for Locking Hub (CU)	1
10975	Dummy Plug (CU)	1
10978	Knob to Plug Lock (DV)	2
10980	Felt inside Sleeve for Driven Gears (GT-LT)	2
12031	Collar to Forward Motion Clutch (CQ)	1
12038	Plunger for Forward Motion and Miller Clutch (DQ-KQ)	2
12041	Plug for Forward Motion and Miller Clutch (EQ-LQ)	2
12138	Screw for Clutch Levers (EQ-JQ)	2
12288	Breather Body (ES)	1
12289	Guide to Breather Disc (FS)	1
14126	Pinion reversing Motion (CS)	1
14127	Shaft to Reversing Pinion (DS)	1
14134	Hub to Oil Elevator Gear and Disc (DS)	2
14138	Bush to Reversing Pinion (CS)	1
14143	Lever to Reverse Motion Clutch (BP)	1
14144	Plunger for Reverse Motion Clutch (BQ)	1
15053	Distance Ring on Main Axle (JU)	1
15057	Bronze Washer on Main Axle (DU)	2
15155	Spring for Plug Lock (DV)	2
15515	Safety Spring to Reverse Motion Dog (DR)	1
RO. 51204	Thrust Ring to Worm Shaft (AR)	1
RO. 99208	Ballrace on Rear Crankshaft (BS)	1
Ass. 670	Bracket holding Ballrace (BS)	1
Ass. 678	Reduction Gear of Reverse Motion with Bush (BS)	1
Ass. 679	Reverse Motion Lever and Spindle Assembly (AP)	1
Ass. 681	Oil Elevator Gear Assembly (BT)	1
Ass. 682	Oil Elevator Disc Assembly (DT)	1
Ass. 685	High Tension Wire Assembly (GP)	1
Ass. 687 B	Forward Motion Reduction Gear Assembly (ES)	1
Ass. 688	Forward Motion Lever and Spindle Assembly (DP)	1
Ass. 690 BB	Magneto with Pinion and H.T. Lead (FQ)	1
Ass. 740 B	Low Speed Driven Gear Assembly (JV)	1
Ass. 741 B	Top Speed Driven Gear Assembly (JV)	1
Ass. 742 A	Worm Wheel Assembly (HT)	1
Ass. 744	Miller Clutch Lever and Spindle Assembly (KP)	1
Ass. 773	Breather Assembly (FT)	1
910960	Sleeve for Driven Gear with Felt Assembly (GU-LT)	2
910974	Plug to Locking Hub Assembly (AU)	1
910975	Dummy Plug Assembly (AU)	1
910977	Lock for Plug (EV)	2

Plate No. 4

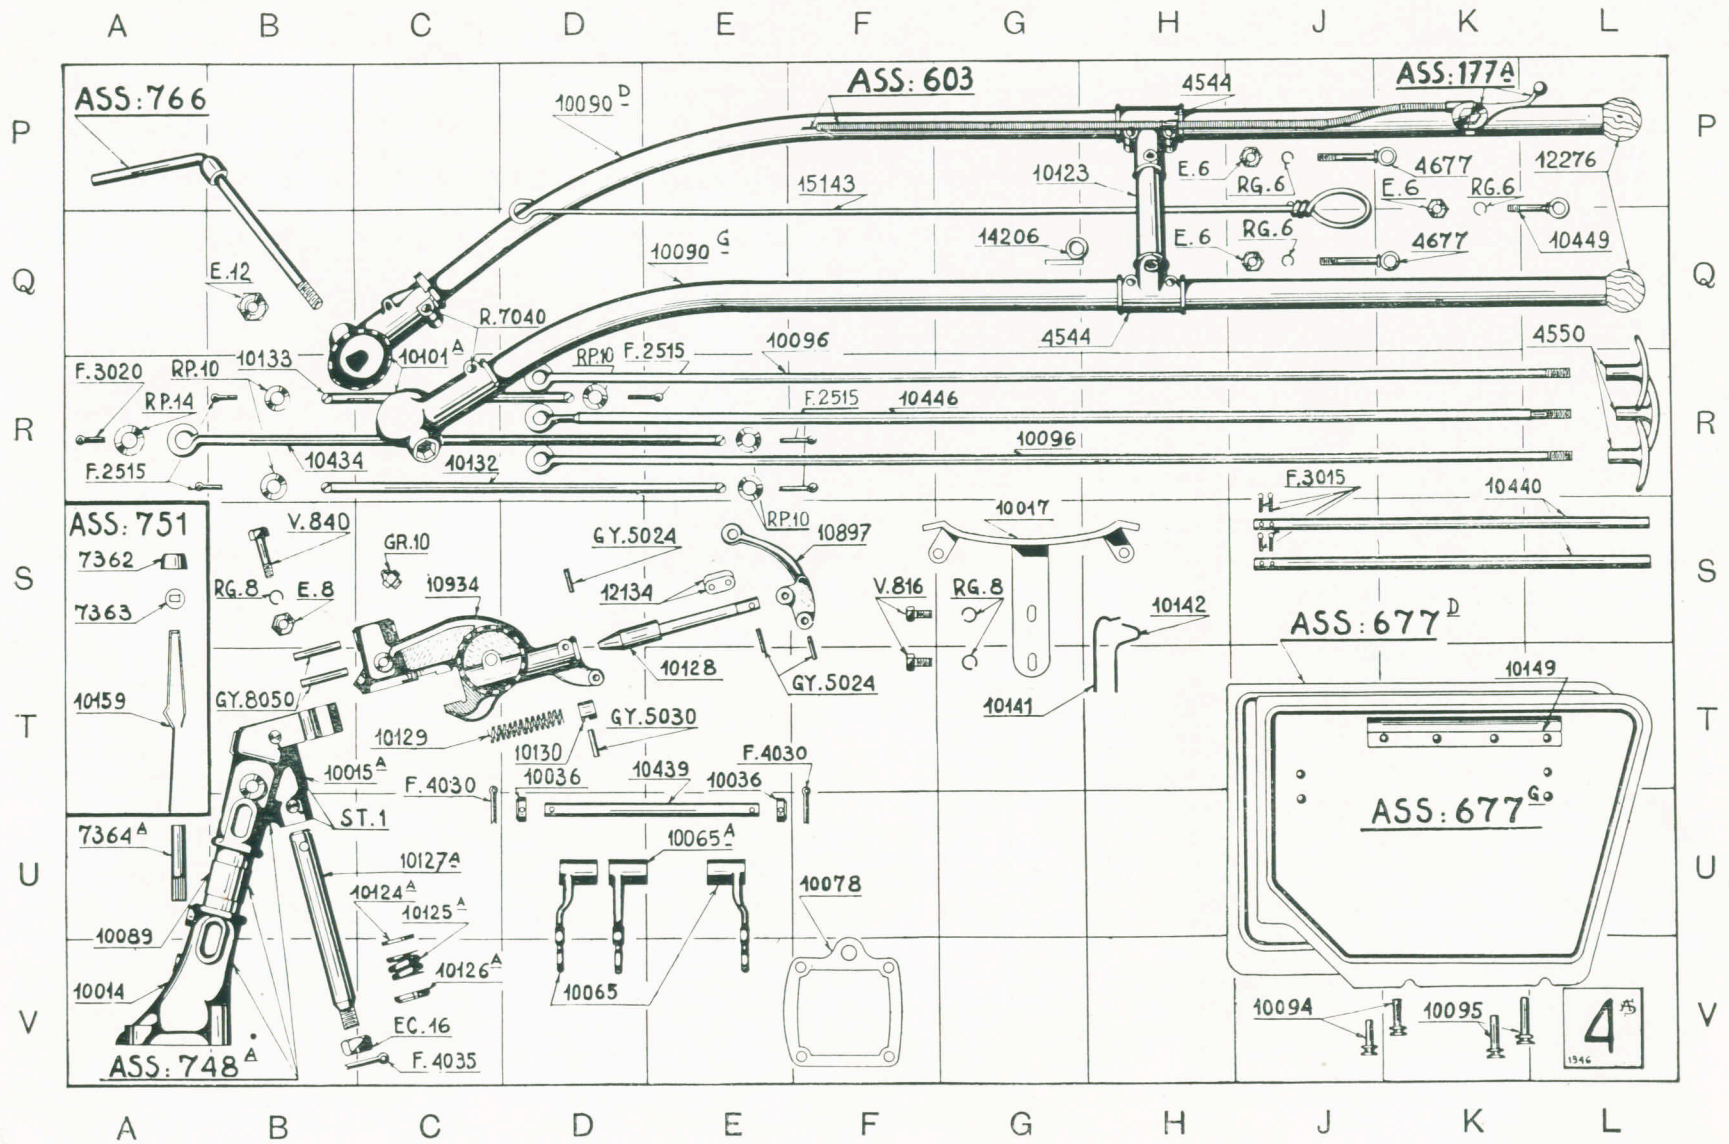


Plate No. 4

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
St. 1	Grease Cup on Upper Steering Bracket (BU)	2
E. 6	Nut for Control Guides (HP-HQ-KP)	3
R.G. 6	Spring Washer for Control Guides (JP-JQ-KP)	3
E. 8	Nut Fixing Swivel (BS)	1
R.G. 8	Spring Washer for Swivel and Tank Cradle (BS-GS)	3
GR. 10	Grease Cups on Serrated Swivel Head (CS)	1
RP. 10	Washer for Controls (AR-DQ-ES)	5
E. 12	Nut for Steering Locking Handle (BQ)	1
RP. 14	Washer for Reserve Motion Control (AR)	1
EC. 16	Castellated Nut for Pivot Pin Steering Swivel (CV)	1
V. 816	Bolt for fixing Tank Cradle (FS)	2
V. 840	Stop Bolt for Swivel Head (BS)	1
F. 2515	Split Pin for Controls (AR-DQ-FR)	5
F. 3015	Split Pin for Side Shield Rods (JR)	4
F. 3020	Split Pin for Reverse Motion Control (AR)	1
F. 4030	Split Pin for Control Transmission Spindle (CT-ET)	2
F. 4035	Split Pin for Steering Swivel (CV)	1
	4544 Fitting to Cross Member of Steering Arms (HP-GQ)	2
	4550 Handle to Clutch Controls (LQ)	3
	4677 Guide for Control Rods (KP-KQ)	2
GY. 5024	Pin for Steering Release Lever (DS-FT)	3
GY. 5030	Pin for Steering Release Plunger (DT)	1
R. 7040	Rivet fixing Steering Arm Sockets (CQ)	2
	7362 Welded Cap to Dip Stick (AS)	1
	7363 Felt Washer for Dip Stick (AS)	1
	7364 A Guide for Dip Stick (AU)	1
GY. 8050	Pin to Serrated Swivel (BT)	2
	10014 Steering Base (AV)	1
	10015 A Upper Steering Bracket (BT)	1
	10017 Cradle for Tank (GS)	1
	10036 Washer for Transmission Spindle (DT-ET)	2
	10065 Transmission Lever to Clutch Control (DV)	2
	10065 A Transmission Lever to Clutch Control (EU)	1
	10078 Paper Joint underneath Steering Base (FU)	1
	10089 Connecting Tube for Steering Base (AU)	1
	10090 D Steering Arm, right (DP)	1
	10090 G Steering Arm, left (EQ)	1

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
10094	Short Pin for Side Shields (JV)	2
10095	Long Pin for Side Shields (KV)	2
10096	Control Rod for Main and Miller Clutches (EQ-GR)	2
10101 A	Socket to Steering Arms (CR)	2
10123	Cross Member to Steering Arms (GP)	1
10124 A	Washer to Pivot for Steering Swivel (CU)	1
10125 A	Spring to Pivot Pin for Steering Swivel (CU)	1
10126 A	Collar to Pivot Pin for Steering Swivel (CV)	1
10127 A	Pivot Pin to Steering Swivel (CU)	1
10128	Plunger to Steering Release (ET)	1
10129	Spring for Steering Release Plunger (CT)	1
10130	Collar for Steering Release Plunger (DT)	1
10132	Transmission Rod for Main Clutch (CR)	1
10133	Transmission Rod for Miller Clutch (BR)	1
10141	Clip fixing Side Shields, long (GT)	4
10142	Clip fixing Side Shields, short (HS)	4
10149	Hand Grip for Side Shields (KT)	2
10159	Welded Wire for Dip Stick (AT)	1
10434	Transmission Rod for Reverse Motion Clutch (BR)	1
10439	Spindle to Control Transmission (ET)	1
10440	Rod supporting Side Shields (KR)	2
10446	Control Rod for Reverse Motion Clutch (FR)	1
10449	Guide for Steering Release (LQ)	1
10897	Transmission Lever for Steering Release (FS)	1
10934	Serrated Swivel Head (CS)	1
12134	Link for Steering Release (DS)	2
12276	Wooden Knob to Steering Arms (LP)	2
14206	Eyelet for Rod Guide to Reverse Motion (GQ)	1
15143	Control Rod for Steering Release (FP)	1
Ass. 177 A	Bowden Lever, complete (KP)	1
Ass. 603	Bowden Cable Inner and outer members, complete (FP)	1
Ass. 677 D	Engine Side Shield Assembly, R.H.S. (JS)	1
Ass. 677 G	Engine Side Shield Assembly, L.H.S. (KU)	1
Ass. 748 A	Steering Column Assembly, welded (AV)	1
Ass. 751	Dip Stick Assembly (AS)	1
Ass. 766	Locking Handle for Steering Sockets (AP)	1

Plate No. 5

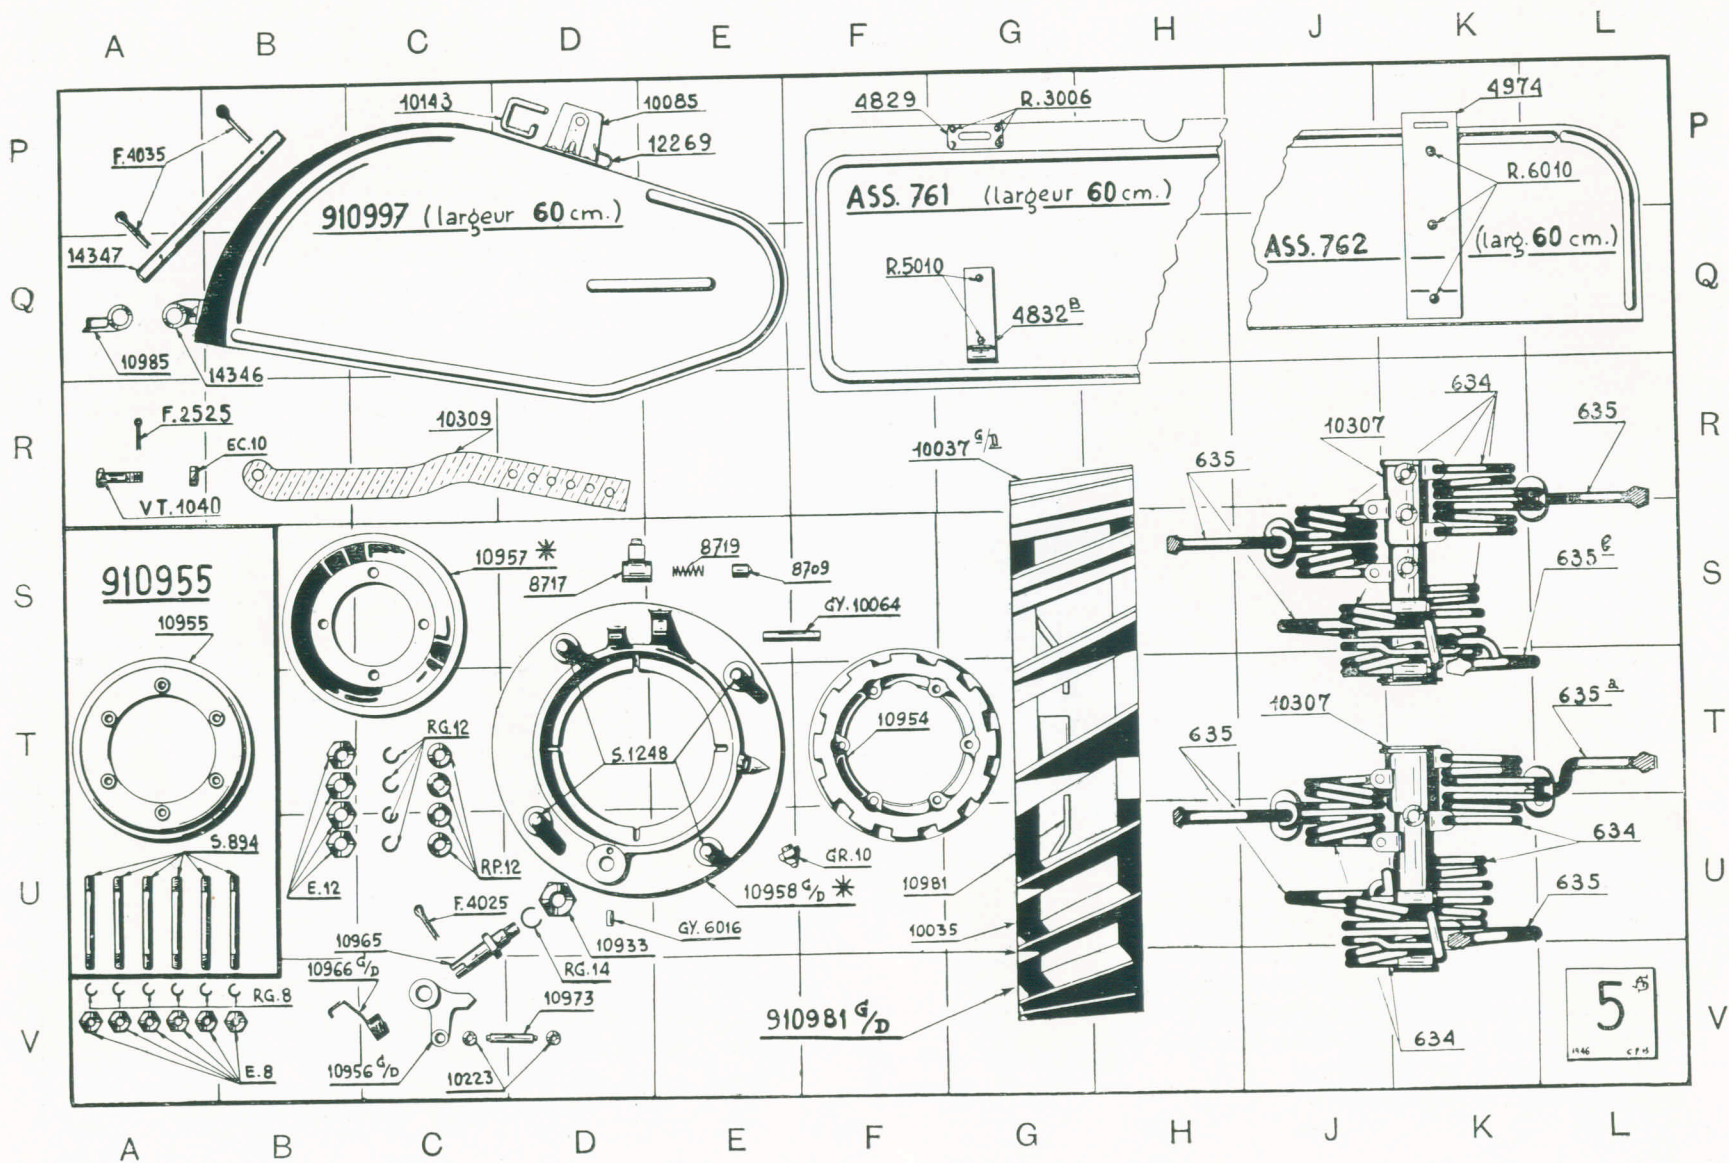


Plate No. 5

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
E. 8	Nut for Hubs (BV)	12
RG. 8	Spring Washer for Hubs (BV)	12
EC. 10	Castellated Nut (BR)	1
GR. 10	Grease Nipple (FU)	2
E. 12	Nut for Wheels (BU)	8
RG. 12	Spring Washers for Wheels (CT)	8
RP. 12	Washer for Wheels (CU)	8
RG. 14	Spring Washer for Wheel Ratchet (DV)	2
634	Miller Spring for Plain Heavy Tines (KR-KV-LU)	8
635	Miller Tine, Plain Heavy, Hook, Central (HR-HT-LR-LU)	6
635 A	Miller Tine, Plain Heavy, Hook, Left (LT)	1
635 B	Miller Tine, Plain Heavy, Hook, Right (LS)	1
S. 894	Stud for Hubs (BU)	12
VT. 1040	Drilled Bolt for Hinging Miller Cover Regulating Bar (AR)	1
S. 1248	Stud on Wheel Discs (DT)	8
F. 2525	Split Pin for Bolt Hinging Miller Cover Regulating Bar (AR)	1
R. 3006	Rivet fixing Slotted Plate on Upper Rear Shield (GP)	8
F. 4025	Split Pin for Red Pawl Pivot Pin (CU)	2
F. 4035	Split Pin to Miller Cover Hinge (AP)	2
4829	Slotted Plate on Upper Rear Shield (FP)	2
4832 B	Hook on Upper Rear Shield for Dust Board (GQ)	2
4974	Slotted Plate on Dust Board (KP)	2
R. 5010	Rivet fixing Hook on Upper Rear Shield (FQ)	4
R. 6010	Rivet fixing Slotted Plate on Dust Board (KP)	6
GY. 6016	Pin to Pivot Pin for Red Pawl (EU)	2
8709	Catch Pin for Green Lock (FS)	2
8717	(Green) Lock for Wheel Ratchet (DS)	2
8719	Spring for Green Lock (ES)	2
10035	Welded Rim of Road Wheel (FU)	4
10037 D	Welded Wheel Strake, R.H.S. (FR)	16
10037 G	Welded Wheel Strake, L.H.S. (FR)	16

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
GY. 10064	Pivot Pin for Green Lock (FS)	2
10085	Bracket for Regulating Bar (EP)	1
10143	Locking Pin for Regulating Bar (CP)	1
10223	Washer to Red Pawl Sliding Pin (CV)	4
10307	Miller Sleeve for Heavy Springs (JR-JT)	2
10309	Regulating Bar for Miller Cover (CR)	1
10933	Special Nut for Axle 10965 (DU)	2
10954	Hinge Bracket for Green Lock (FT)	2
10955	Flange for Wheel (AS)	2
10956 D	(Red) Pawl for Wheel Ratchet, R.H.S. (BV)	1
10956 G	(Red) Pawl for Wheel Ratchet, L.H.S. (BV)	1
10957	Bell for Hubs (CS)	2
10958 D	Disc for Road Wheel, R.H.S. (EU)	1
10958 G	Disc for Road Wheel, L.H.S. (EU)	1
10965	Pivot Pin for Red Pawl (BU)	2
10966 D	Spring for Red Pawl, R.H.S. (BV)	1
10966 G	Spring for Red Pawl, L.H.S. (BV)	1
10973	Pin on Ratchet Pawls (DV)	2
10981	Welded Lug on Wheel (FU)	8
10985	Hinge to Miller Cover (AQ)	1
12269	Hook on Miller Cover for Upper Rear Shield (EP)	2
14346	Hinge Bracket on Miller Cover (BQ)	1
14347	Hinge Bar for Miller Cover (AQ)	1
Ass. 761	Upper Rear Shield for 22 in. working width, compl. (FP)	1
Ass. 761 L	Upper Rear Shield for 28 in. working width, compl. (FQ)	1
Ass. 762	Dust Board for 22 in. working width, complete (JQ)	1
Ass. 762 L	Dust Board for 28 in. working width, complete (JQ)	1
Ass. 956	Miller Cover for 28 in. working width, complete (BQ)	1
910955	Flange for Wheel, complete (AS)	2
910981 D	Road Wheel, R.H.S. (EV)	1
910981 G	Road Wheel, L.H.S. (EV)	1
910997	Miller Cover for 22 in. working width, complete (BP)	1



Plate No. 6

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
E. 8	Nut for Miller Cover and Miller Cover Hinge (AT-HS)	5
RP. 8	Washer for U Bolt 10896 (AU)	2
RG. 8	Spring Washer for Miller Gearbox and Miller Cover Hinge (AU-HS)	5
CD. 300	Miller Tine, Hinged Light, Hook, Central (ER-ET-LS-KP)	14
CD. 301	Miller Tine, Hinged Light, Hook, Left (ET)	1
CD. 302	Miller Tine, Hinged Light, Hook, Right (LS)	1
RD. 310	Miller Spring for Hinged Light Miller Tines (HQ-JQ-HU-JU)	16
BD. 311	Lug for Hinged Light Miller Tines, L.H.S. (HP-GU-GV-JS-JV-KQ)	16
BD. 312	Lug for Hinged Light Miller Tines, R.H.S. (GQ-GU-JP-JQ-JU-KS)	16
AD. 600	Pin for Hinged Miller Tines (GP-GQ-FS-FV-KP-KU-KV-JS)	16
S. 846	Stud fixing Miller Gearbox Cover (ES)	3
GY. 3090	Pin for Miller Springs (EQ)	16
F. 3535	Split Pin to Mud Scraper (BQ)	2
4511 A	Peg for Miller Bushes (DT)	2
5019 A	Depth Shoe (DV)	1
5246	Twist Pin for Locking Depth Bar (ET)	1
5270	Nut fixing Depth Shoe (CU)	2
5271	Bolt fixing Depth Shoe (CV)	2
R. 6016	Rivet to Mud Scraper (BR-AP)	4
F. 6030	Split Pin fixing Hinged Miller Tine Pin (FQ-FV-KQ-KS-KU)	32
GS. 6050	Pin Fixing Miller Dog (AR)	1
C. 6430	Key for Miller Dog (AS)	1
7163	Pin Hinging Depth Regulating Bar (AV)	1
C. 8645	Key for Crown Wheel (ES)	2
10045	Miller Dog (AS)	1
10057	Bush to Bevel Pinion (BS-CS)	2

Part Ref. No.	Description of Part and Location on Plate	Quantity per mc.
GS. 10060	Pin fixing Miller Sleeves on Miller Shaft and Miller Extensions (CP)	8
10265	Support to Mud Scraper Blades (AP)	2
10266 D	Blade to Mud Scraper, R.H.S. (AR)	1
10266 G	Blade to Mud Scraper, L.H.S. (AP)	1
10267	Pivot for Mud Scraper Blades (BQ)	2
10268 D	Spring to Mud Scraper Blade, R.H.S. (BR)	1
10268 G	Spring to Mud Scraper Blade, L.H.S. (BP)	1
10299	Cover to Miller Gearbox (GS)	1
10302	Crown Wheel (ES)	1
10303	Bevel Pinion (BS)	1
10304	Bronze Washer to Left of Crown Wheel (ES)	1
10306	Miller Shaft (DR)	1
10312 A	Miller Sleeve for Light Springs (HS)	2
10313	Felt Washer inside Miller Sleeves (CQ-CT)	2
10314	Paper Joint for Miller Gearbox Cover (FS)	1
10315 A	Depth Regulating Bar (BT)	1
10393	Steel Thrust Washer to Bevel Pinion, rear (SC)	1
10394	Bronze Thrust Washer to Bevel Pinion, front (CS)	1
10395	Bronze Washer to right of Crown Wheel (DS)	1
10396	Miller Sleeve Extension for Light Springs (JP-HV)	2
10982	Flange to Miller Casing, alone (BS)	1
10983	Miller Gear Casing, alone (CS)	1
10984	Tube for Miller Casing, alone (BS)	1
10986	U Bolt fixing Miller Cover Hinge and Mud Scraper (BU)	1
10988	Bracket for Mud Scraper (AQ)	1
12207 D	Bush to Miller Shaft, R.H.S. (CR)	1
12207 G	Bush to Miller Shaft, L.H.S. (DT)	1
12218	Leather Washer to Miller Sleeve (CR-CT)	2
910984	Miller Casing Assembly, without Gears, Bushes and Cover (AT)	1
910988	Complete Mud Scraper Assembly (BP)	1

Remember!

YOUR MACHINE CAN ALSO BE USED TO

MOW

SHRED SOIL

RIDGE

PUMP

and as a

STATIONARY POWER UNIT